

Holster Hanger - for CR Speed®, and other, holsters

Thanks for purchasing a McCoy's Holster Hanger. I hope you enjoy it and I hope it works well for you. Please take a couple of minutes to read these directions and my comments...


Mount holster to the hanger -

- 1 - remove the holster from the original hanger
- 2 - disassemble the lower clamp on the hanger by removing the large screw in the center of the clamp
- 3 - attach the holster mount block to the holster using the flat-head screws provided
- 4 - reassemble the lower clamp

Install holster hanger on your holster belt. Loosen the six clamp screws and slide the hanger into position on the belt. Don't tighten the clamp screws until you have the holster in the desired position. You may want to slide the hanger forward or back to achieve the holster position you want. When the hanger is in the correct spot on the belt, tighten all six screws evenly for best results.

Position the holster -

- 1 - loosen all three screws in both clamps, *do not attempt to change the hanger position without loosening the clamping screws.*
- 2 - move the holster into approximately the position desired and tighten the large screw in each clamp using the wrench provided
- 3 - although the hanger will not be locked solidly into position, gently holster your unloaded pistol and test the position, if the position needs to be adjusted loosen the screws and move the holster.
- 4 - when the holster is in the proper position remove your holster belt and thoroughly tighten all three screws in both clamps, tighten the large screw and the two small screws alternately to achieve the best lock-up

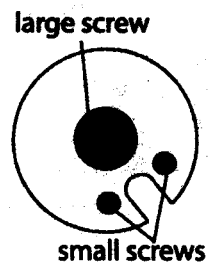

- With this hanger it is possible to put your holster into positions that are not legal in USPSA competition. Please be aware of the rules for your division and position your holster accordingly. If you don't...don't come crying to me when the Match Director says move your holster.
- Please don't move the holster hanger without loosening the clamping screws. The outer ends of the balls on the steel strut are checkered to achieve the locking action. If the hanger is moved when the clamps are partially tightened these checkered balls will rasp out the depressions in the spacer plates, possibly to the point that it is no longer possible to lock the hanger into position.
- When tightening the clamps to lock the hanger into position, remember that the large screw in the center provides most of the clamping action. It will need to be *quite tight*. The smaller screws need to be tightened evenly for proper clamping action, but these are small screws through a fairly thin piece of aluminum. Overzealous tightening will strip out the threads on these small screws.
- The hanger won't move in the normal processes of holstering and drawing your pistol. If you put enough force on it (run into a wall with it, go prone on top of it) it will move - possibly damaging the hanger.

Guarantee - I'm not a big corporation so I won't give a long legalese guarantee. If you don't like the holster hanger, or it doesn't work, let me know and I'll try to make it right. Email is about the most effective way to reach me - jkmccoy@wcc.net

Liability - Use some common sense. Shooting is a potentially dangerous sport. The user accepts all responsibility for responsible and careful use of this product. I'll accept no responsibility or liability for consequential damages arising from the use or misuse of this product.